




*MOVING HEAD*

*USER MANUAL*

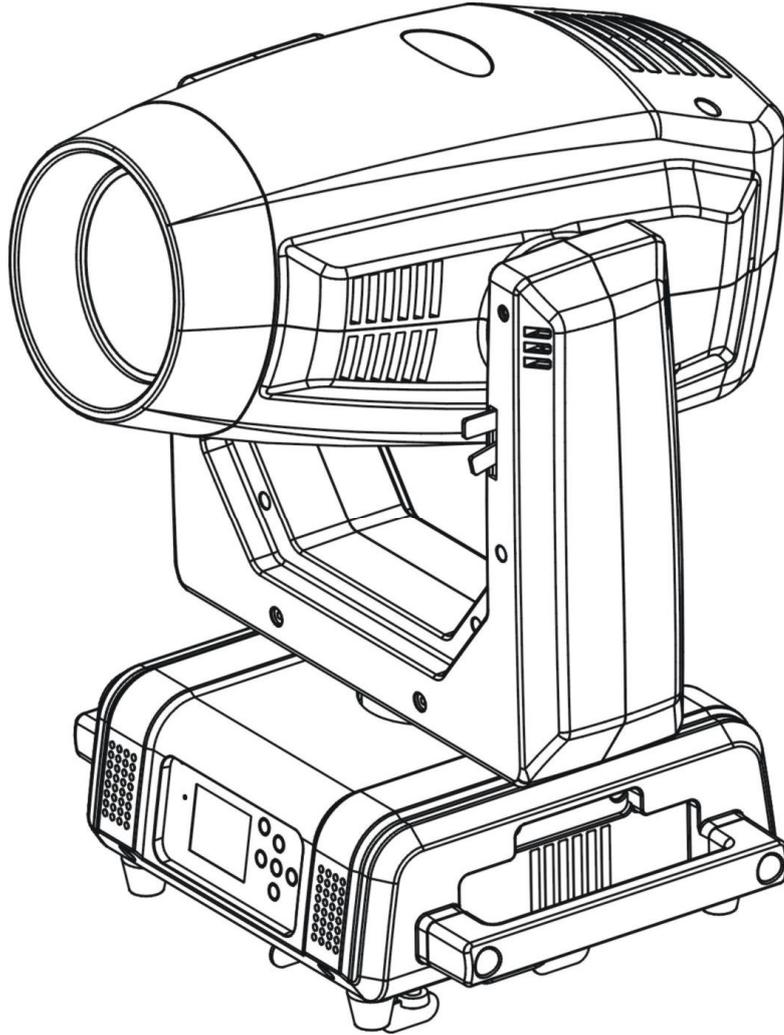

**G9 HYBRID**

KEEP THIS MANUAL FOR FUTURE NEEDS



# Contents

1. Features .....	- 2 -
2. Overview .....	- 3 -
3. SAFETY INSTRUCTIONS .....	- 3 -
3.1) Important safety warns .....	- 3 -
3.2) GENERAL GUIDELINES .....	- 4 -
4. INSTALLATION INSTRUCTIONS .....	- 5 -
4.1) Installing or replacing the lamp .....	- 5 -
4.2) Mounting the device .....	- 6 -
Installation via the Omega holders .....	- 7 -
5. DMX-512 control connection .....	- 9 -
6. DMX-512 connection with DMX terminator .....	- 10 -
7. Projector DMX start address selection .....	- 10 -
9. Control Board .....	- 11 -
8.1 <i>FUNCTION</i> .....	- 13 -
8.1.1 Set DMX Address .....	- 13 -
8.1.2 DMX Value .....	- 13 -
8.1.3 Slave Mode .....	- 14 -
8.1.4 Auto Program .....	- 14 -
8.1.5 Sound Control .....	- 14 -
8.2 <i>Information</i> .....	- 14 -
8.2.1 Time information .....	- 14 -
8.2.2 Temperature Info .....	- 16 -
8.2.3 Fan Info .....	- 17 -
8.2.4 Encode Info .....	- 17 -
8.2.5 Ethernet IP .....	- 17 -
8.2.6 Software version .....	- 17 -
8.2.7 Error Info .....	- 17 -
8.3 <i>LAMP CONTROL</i> .....	- 17 -
8.3.1 Lamp on/off .....	- 18 -
8.3.2 Automatic on .....	- 18 -
8.3.3 Lamp on via external controller .....	- 18 -
8.3.4 Lamp off via external controller .....	- 18 -
8.3.5 Max on at temp .....	- 19 -
8.3.6 Lamp off temp .....	- 19 -
8.4 <i>PERSONALITY</i> .....	- 19 -
8.4.1 Status settings .....	- 19 -
8.4.2 Service setting .....	- 21 -
8.4.3 Display settings .....	- 22 -
8.4.4 Temperature C/F .....	- 23 -
8.4.5 Initial Status .....	- 23 -
8.4.6 Select Signal .....	- 23 -
8.4.7 Set Universe .....	- 24 -
8.4.8 Reset Default .....	- 24 -
8.5 <i>Reset-function</i> .....	- 24 -
8.6 <i>Effect Adjust</i> .....	- 24 -
8.6.1 Test channel .....	- 24 -
8.6.2 Manual control .....	- 24 -
8.6.3 Calibration .....	- 25 -
8.7 <i>Users mode set</i> .....	- 25 -
8.7.1 User mode .....	- 25 -
8.7.2 Edit User mode .....	- 25 -
8.8 <i>Edit program</i> .....	- 25 -
8.8.1 Select program .....	- 25 -
8.8.2 Edit program .....	- 25 -
8.8.3 Edit scenes .....	- 25 -
8.8.4 Rec. Controller .....	- 25 -
9. INSTRUCTIONS ON USE .....	- 27 -
10. ERROR MESSAGE .....	- 31 -
11. CLEANING AND MAINTENANCE .....	- 33 -
12. TECHNICAL SPECIFICATIONS .....	- 33 -

Thank you for your patronage. We are confident that our excellent products and service can satisfy you. For your own safety, please read this user manual carefully before installing the device.

In order to install, operate, and maintain the lighting safely and correctly. We suggest that the installation and operation should be done by the verified technician and follow the instruction strictly.

	<b>CAUTION!</b> Keep this device away from rain and moisture !
	<b>CAUTION!</b> Unplug mains lead before opening the housing.

Every person involved with the installation, operation and maintenance of this device has to:  
-be qualified  
-follow carefully the instructions of this manual

## INTRODUCTION:

Thank you for having chosen this professional moving head.  
You will see you have acquired a powerful and versatile device.

Unpack the device. Inside the box you should find:


1. One XLR connection cable
2. Two omega clamps
3. One safety rope
4. Manual

Please check carefully that there is no damage caused by transportation. Should there be any, consult your dealer and don't install this device.

## 1. Features

- Lamp: MSD Platinum 14 R
- 3 DMX Channels mode: 17/19/26 channels
- Stand alone operation with Master/Slave function, sound activated via built in microphone.
- Pan movement: pan 540° /630° offset, Tilt movement: tilt 250°
- Color wheel: 13 colors plus white, with two direction rainbow effect,
- Static gobo: 12 static gobos plus open with different speed gobo shaking and gobo indexing
- Rotation gobo: 8 interchangeable, rotating gobos plus open
- Prism and prism rotating, with 16 prism macros
- Strobe effect : 0~13 flashes per second or random strobe
- Dimmer intensity from 0%~100%
- Stepless frost, 0%~100% linear change frost
- Zoom: Beam 2.25° ~15°, Spot 3.5°~24°, Wash 10°~35° .
- Control board with full color LCD graphic display and touch-keyboard
- Display: Can be changed 180° reverse to fit for different installation position.
- Rechargeable Back up Battery for Display
- Preset program: 7 built in programs can be called up via DMX controller
  - Software-upload by optional accessory via DMX line

## 2. Overview

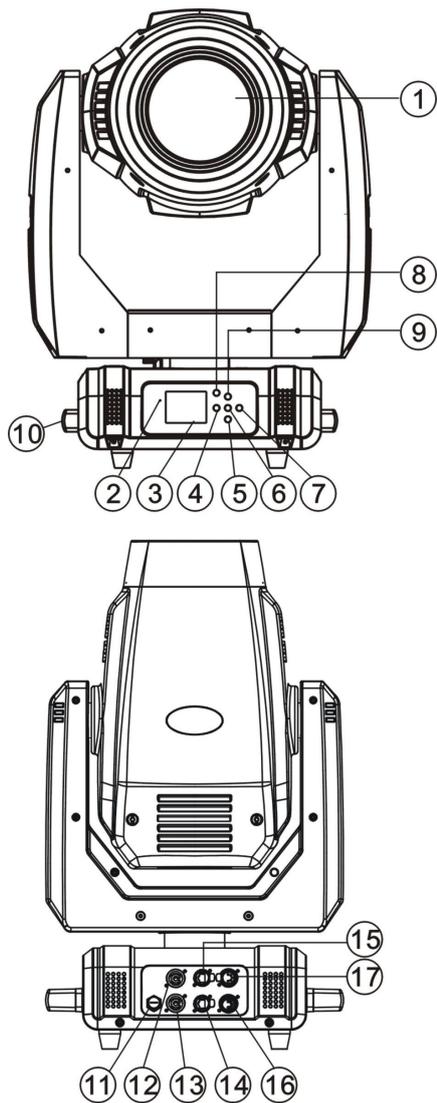

- 1) Lens
- 2) Microphone
- 3) Display
- 4) Left-button
- 5) Down-button
- 6) ENTER-button
- 7) Right-button
- 8) Mode/Esc-button
- 9) Up-button
- 10) Handle
- 11) Fuse
- 12) Power In
- 13) Power Out
- 14) RJ45 Out
- 15) RJ45 In
- 16) DMX Out
- 17) DMX In

## 3. SAFETY INSTRUCTIONS

### 3.1) Important safety warns

	<b>CAUTION!</b> Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching wires!
---	---

This device has left the factory in perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

**Important:**



***Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.***

If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device. Leave the device switched off until it has reached room temperature.

This device falls under protection-class I. Therefore it is essential that the device be earthed. The electric connection must carry out by qualified person. Make sure that the available voltage is not higher than stated at the end of this manual. Make sure the power cord is never crimped or damaged by sharp edges. If this would be the case, replacement of the cable must be done by an authorized dealer.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.

During initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective, it should decrease gradually.

Please don't project the beam onto combustible substances.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

	<b>CAUTION!</b> Never touch the device during operation! The housing may heat up
	<b>CAUTION!</b> Never look directly into the light source, as sensitive persons may suffer an epileptic shock.

**Please be aware that damages caused by manual modifications to the device are not subject to warranty. Keep away from children and non-professionals.**

### 3.2) GENERAL GUIDELINES

This device is a lighting effect for professional use on stages, in discotheques, theatres, etc., the device was designed for indoor use only.

This fixture is only allowed to be operated with the max alternating current which stated in the technical specifications in the last page of this manual.

Lighting effects are not designed for permanent operation. Consistent operation breaks may ensure that the device will serve you for a long time without defects.

Do not shake the device. Avoid brute force when installing or operating the device.

While choosing the installation-spot, please make sure that the device is not exposed to extreme heat, moisture or dust. Please don't project the beam onto combustible substances. The minimum distance between light-output from the projector and the illuminated surface must be more than 10 meter.

If you use the quick lock cam in hanging up the fixture, please make sure the quick lock fasteners turned in the quick lock holes correctly.

Operate the device only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the device. Most damages are the result of unprofessional operation.

Please use the original packaging if the device is to be transported.

For safety reasons, please be aware that all modifications on the device are forbidden. If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to short-circuit, burns, electric shock, lamp explosion, crash, etc.

## 4. INSTALLATION INSTRUCTIONS

### 4.1) Installing or replacing the lamp

	<b>CAUTION!</b> Only install the lamp with the device unplugged from the mains.
	<b>CAUTION!</b> The lamp has to be replaced when it is damaged or deformed.
	<b>CAUTION!</b> Lamp <b>MUST BE</b> replaced at 1,500 Hours! Use only Genuine Original Philips™ Platinum lamps. Other brand lamps may cause damage and void warranty!

Because of the nature of the extreme heat associated with the **MSD Platinum 14 R 470W** lamp and the tight nature of the internal optical system it is imperative that the lamp be replaced every 1500 hours. This is done to protect the internal optical system as well as prevent accidental lamp explosion, which could lead to hot glass particles falling from the fixture. Failure to change the lamp within 300 hours of operation will result in automatic shut down of the fixture's electronics.

At 1500 hours the display will begin to flash "Replace The Lamp" and the lamp will flicker for the first five minutes of operation. At this point the lamp has reached the maximum rated life and should be replaced immediately. After the lamp has flickered for about five minutes it should strike normally allowing the fixture to be used temporarily until a replacement lamp can be installed. The fixture will continue to operate for an additional 300 hours, however the "Replace the Lamp" warning will continue to flash in the display. Keep in mind that the flicker protection circuitry will only work for about 300 hours (lamp clock life of 1500-1800 hours). After 1800 hours the fixture will no longer respond to DMX commands and immediately enter a hibernation mode that will electronically discontinue all fixture functionality with the exception of a few menu commands. The fixture will continue to enter hibernation mode until the lamp is replaced and the lamp clock has been reset.





Before replacing the lamp let the lamp cool down, because during operation, the lamp can reach very high temperature.

During the installation of halogen lamps do not touch the glass bulbs bare handed. Always use a cloth to handle the lamps during insertion and removal.

Do not install lamps with a higher wattage. They generate higher temperatures than which the device was designed for.

For the installation, you need one: **MSD Platinum 14 R**

**Procedures:**

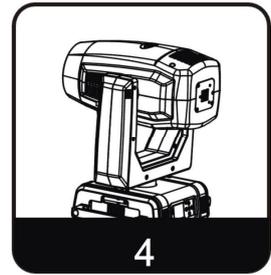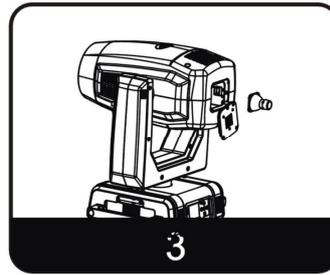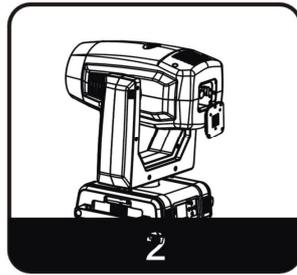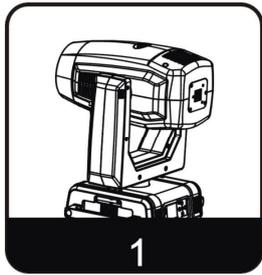

- 1) Please put the fixture on a smooth desk, release the screw A, B, C. Then open the plate for lamp-socket.
- 2) Before taking off the lamp, please release the two red wires which connect to the lamp. Then take off the plate of the lamp carefully, please press the lamp and cover for lamp-socket. Make sure remove the lamp from left to right until the lamp is took off. Attention, wrap the lamp with soft cloth which go with the lamp to avoid your finger touching the glass of lamp directly.
- 3) Replace lamp and make it stable. Please be noted that there's only one installation direction for the lamp. Make sure the replaced lamp has the same installation direction with the old one. Once again, make sure it's stable.
- 4) Put on the plate of lamp socket and tighten screw A, B, C.
- 5) Please reset the lamp life-time. Otherwise it is likely to trigger the protecting firmware of system to make the replaced lamp close itself automatically.

Please remember the lamp is not a hot-restrike type, you must wait for approximately 10 minutes after having turned off the lamp before you can turn it back on again.



**CAUTION!**

Do not operate this device with open cover

4.2) Mounting the device



**CAUTION!**

Please consider the GB7000.1-2007, GB7000.217-2008 and the other respective national norms during the installation. The installation must only be carried out by a qualified person.

The applicable temperature for the lighting is between -10°C to 45°C. Do not use the lighting under or above the temperature.

The installation of the effect has to be built and constructed in a way that it can hold 10 times the weight for 1 hour without any harming deformation.

The installation must always be secured with a secondary safety attachment, e.g. an appropriate safety rope.

Never stand directly below the device when mounting, removing or servicing the fixture.

The operator has to make sure the safety relating and machine technical installations are approved by an expert before taking the device into operation for the first time.

These installations have to be approved by a skilled person once a year.


Overhead mounting requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the device. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

	<p><b>CAUTION!</b></p> <p>The electric connection must only be carried out by a qualified electrician.</p>
---	--

Before mounting make sure that the installation area can hold a minimum point load of 10 times the device's weight.

Connect the fixture to the mains with the power plug.





Installation via the Omega holders

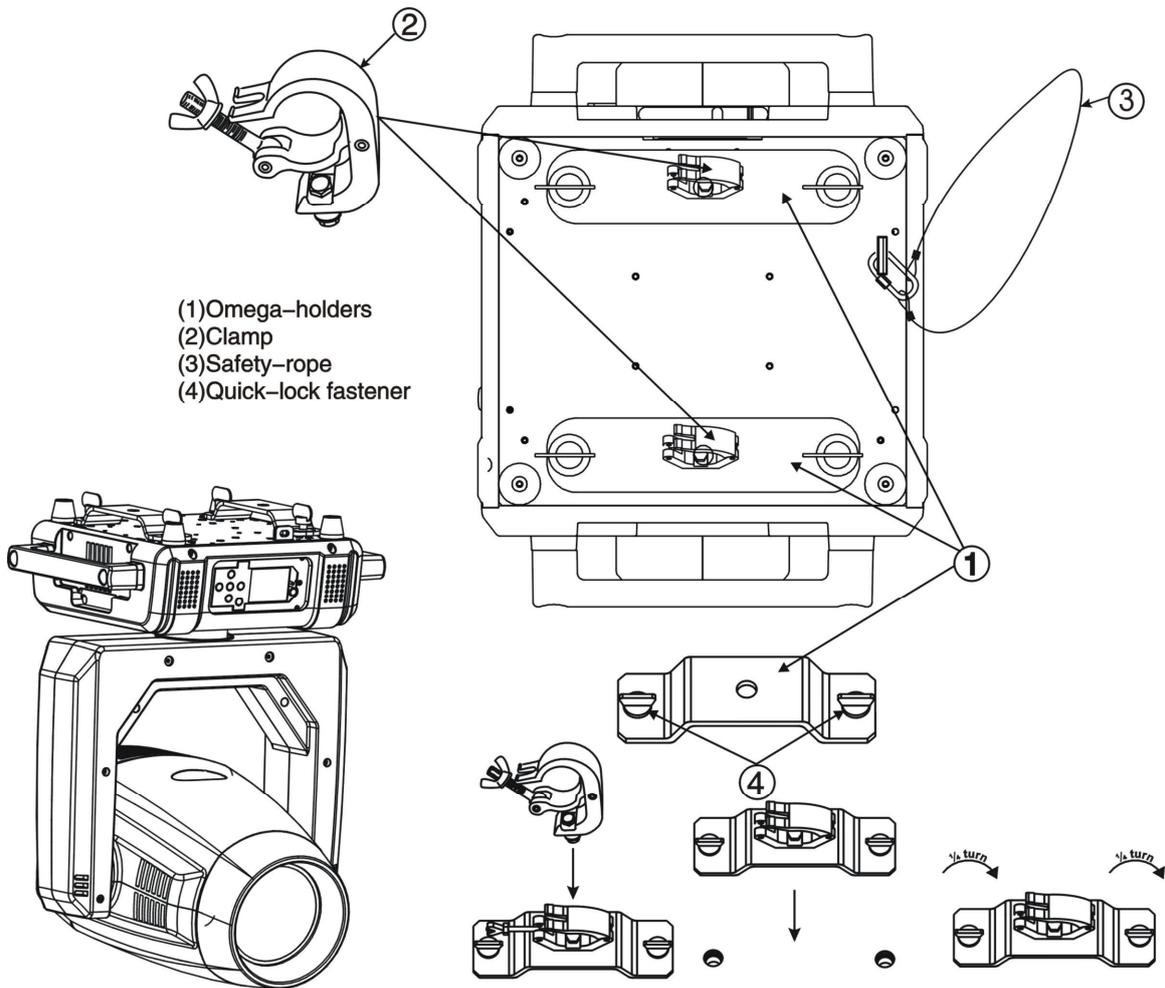


- a) Fixed the clamp on the bracket by tighten up the M12 screw on the bracket to the  $\Phi 13$  hole in the middle of the bracket.
- b) Insert the quick-lock fasteners of the first Omega holder into the respective holes on the bottom of the device. Tighten the quick-lock fasteners fully clockwise.
- c) Install the second Omega holder.
- d) Pull the safety-rope through the holes on the bottom of the base and over the trussing system or a safe fixation spot. Insert the end in the carabine and tighten the safety screw.

**Notice: this step is quite important to ensure that the fixture will not drop out by the damage of the clamp.**

**Dimensional Drawings:**

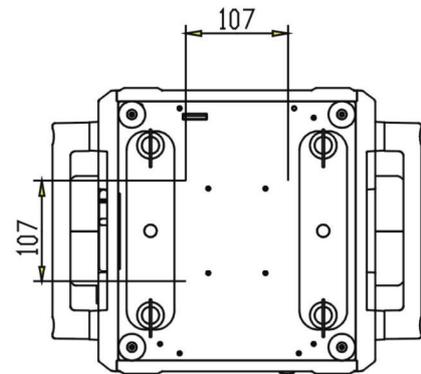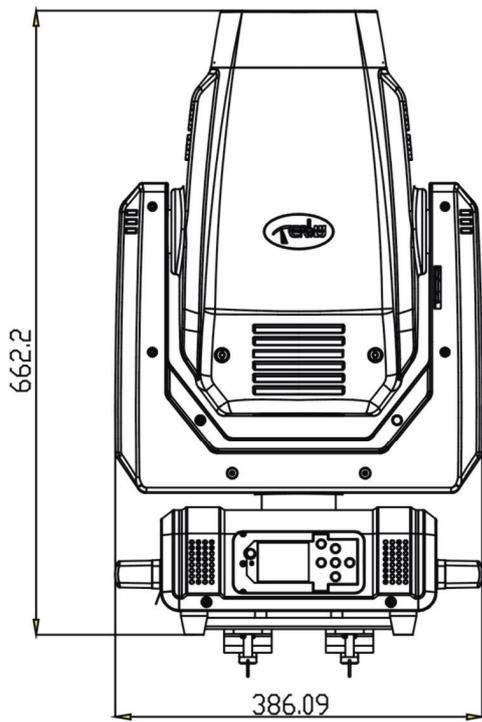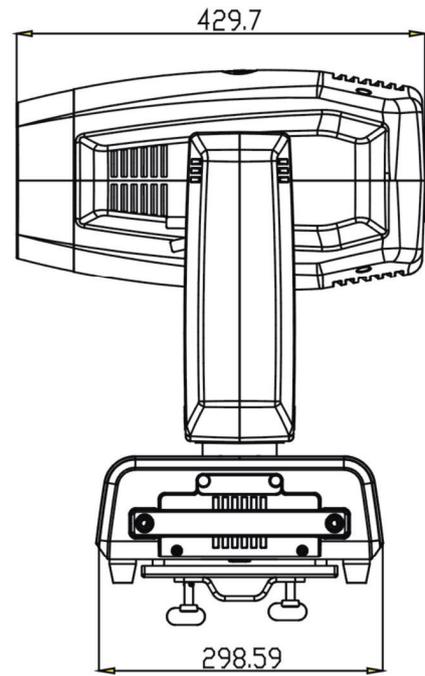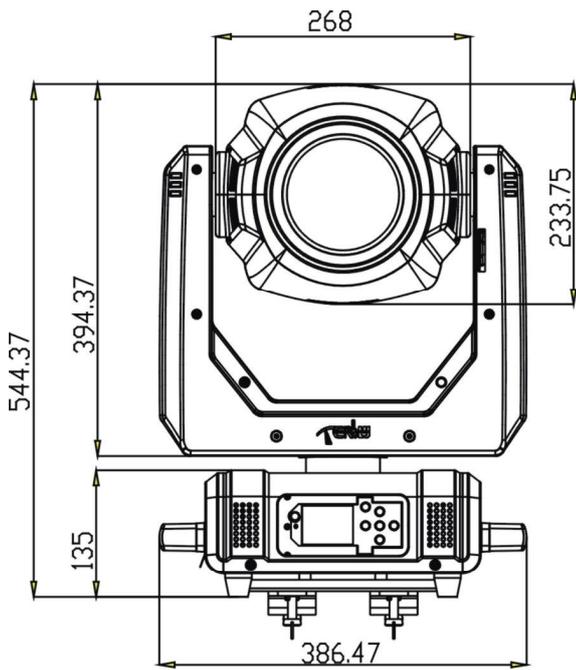

## Layout Drawings:

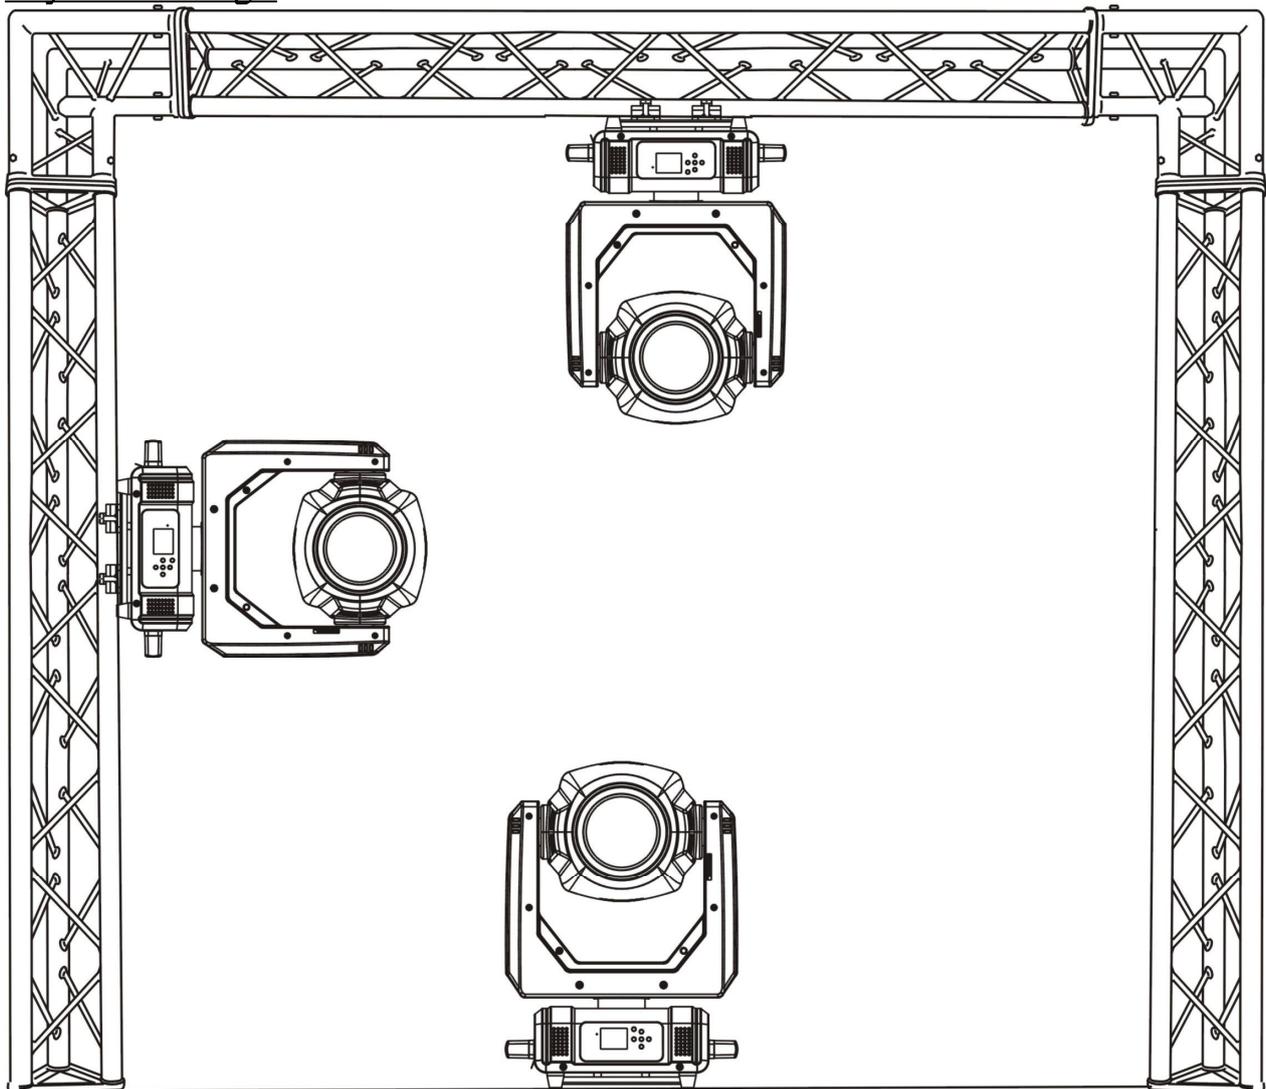


### Mounting points


Be sure this fixture is kept at least 10m away from any flammable materials (decoration etc.). Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

Overhead mounting requires extensive experience, including amongst others calculating working load limits, a fine knowledge of the installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

## 5. DMX-512 control connection


Connect the provided XLR cable to the female 3-pin XLR output of your controller and the other side to the male 3-pin XLR input of the moving head. You can chain multiple Moving head together through serial linking. The cable needed should be two core, screened cable with XLR input and output connectors. Please refer to the diagram below.

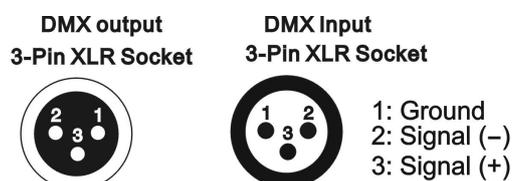

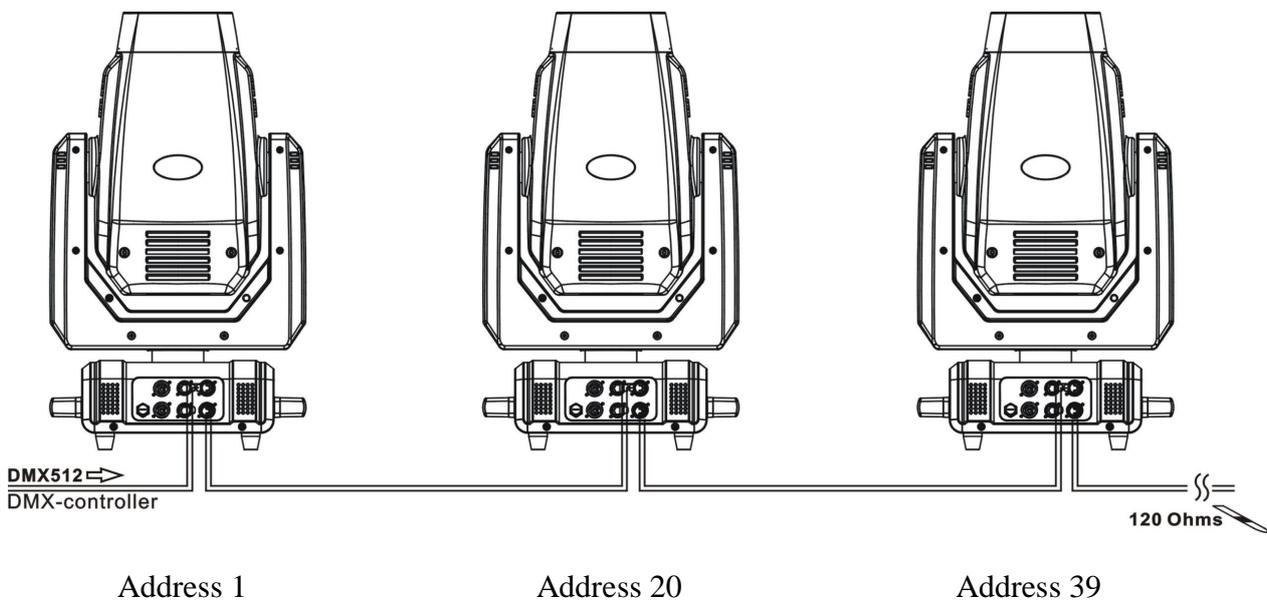

## 6. DMX-512 connection with DMX terminator

For installations where the DMX cable has to run a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a 120 Ω resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below.

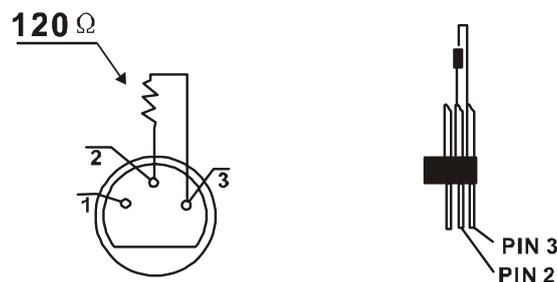

## 7. Projector DMX start address selection

All fixtures should be given a DMX starting address when using a DMX signal, so that the correct fixture responds to the correct control signals. This digital starting address is the channel number from which the fixture starts to “listen” to the digital control information sent out from the DMX controller. The allocation of this starting address is achieved by setting the correct number on the display located on the base of the device.

You can set the same starting address for all fixtures or a group of fixtures, or make different address for each fixture individually.

If you set the same address, all the units will start to “listen” to the same control signal from the same channel number. In other words, changing the settings of one channel will affect all the fixtures simultaneously.

If you set a different address, each unit will start to “listen” to the channel number you have set, based on the quantity of control channels of the unit. That means changing the settings of one channel will affect only the selected fixture.

In the case of the move head, which is a 19channel fixture, you should set the starting address of the first unit to 1, the second unit to 20 (19+1) , the third to 39 (19+20) , and so on.

## 9. Control Board

The Control Board offers several features: you can simply set the starting address , run the pre-programmed program or make a reset.

The main menu is accessed by pressing the  -button until the display starts flashing.

Browse through the menu by pressing the  -button ,  -button ,  -button or  -button. Press the Enter-button in order to select the desired menu. You can change the

selection by pressing the the  -button ,  -button ,  -button or  -button.

Confirm every selection by pressing the  -button. You can leave every mode or access the

display menu via the internal battery by pressing the  -button for 5 minute; The functions provided are described in the following sections. it will exit from flash 10 seconds after the last keypress. Press this key under edit mode, . The functions provided are described in the following sections.

Function	Set Dmx Address	001~XXX		DMX address setting
	Dmx Value	ALL	Control	DMX value display
	Slave Mode	Slave1, Slave2, Slave3		Slave setting
	Auto Program	Master / Alone		Auto program
	Sound Control	Master / Alone		Sound Control
Information	Time Information	Current Time	XXXX(Hours)	Power on running time
		Total Run Time	XXXX(Hours)	Fixture running time
		Last Run Time	XXXX(Hours)	Fixture Last times clear
		Lamp Hours	XXXX(Hours)	Lamp running time
		LastRun Password	Password=XXX	Timer Password 038
	Clear Last Run	ON/OFF	Clear Fixture Last time	
	LampTime Password	Password=XXX	Lamp Password =''038''	
	Clear Lamp Time	ON/OFF	Clear lamp time	
	Temperature Info	Head Temperature	XXX °C/°F	Temperature in the head
	Ethernet IP	Ethernet IP XXX. XXX. XXX. XXX		IP Information
	Fan Info	Fan Info 2U01_Fan1: XXXRPM 2U01_Fan1: XXXRPM 3U01_Fan1: XXXRPM 3U01_Fan1: XXXRPM 4U01_Fan1: XXXRPM		Fan Information
	Software Version	1U01: Vx.x.x 2U01: Vx.x.x :		Software version

Lamp Control	Lamp On/Off Automatic On Lamp On via DMX Lamp Off via DMX Max On at Temp. Lamp Off Temp.	ON/OFF ON/OFF ON/OFF ON/OFF 20~79°C, 45°C / 68~174°F 113°F 80~139°C, 130°C / 176~282°F, 266°F	Lamp on/off Lamp on/off Power on Lamp on via DMX Lamp off via DMX Lamp restart at temp. Lamp off at temp.	
Personality	Status Settings	Address Via DMX No DMX Status Pan Reverse Tilt Reverse Pan Degree Feedback Mic Sensitivity Hibernation	ON/OFF Close/Hold/Auto/Music ON/OFF ON/OFF 630/540 ON/OFF 0~99% OFF, 01Min~99Min, 15Min	Add. via DMX Auto run if no DMX Pan Reverse movement Tilt Reverse movement Pan Degree Select Movement Feedback Movement Mode Select Stand by Mode
	Service Setting	Password RDM PID	Password=XXX XXXXXXX	Service Password“=050” RDM PID Code
	Display Setting	Shutoff Time Display Reverse Key Lock	02~60m 05m ON/OFF/Auto ON/OFF	Display shutoff time Reverse 180 degree Key Lock
	Temperature C/F	Celsius Fahrenheit		Temperature switch between °C/°F
	Initial Status	Control =XXX :		Initial effect position
	Select Signal	DMX Only Art-Net On IP2 Art-Net On IP10		DMX Only Art-Net On IP2 Art-Net On IP10
	Set Universe	000~255		Setting Art-Net Universe
	Reset Default	ON/OFF		Restore factory set.
Reset Function	Reset All Reset Pan&Tilt Reset Colors Reset Gobos Reset Shutter Reset Others		Reset all motors Reset Pan/Tilt Reset color wheel Reset gobos Reset shutter or dimmer Reset other motors	
Effect Adjust	Test Channel	Control = XXX :	Test function	
	Manual Control	Control = XXX :	Fine adjustment of the lamp	
	Calibration	Calibrate Password Pan=XXX/ :	Password “050” Calbrate and adjust the effects to standard/right position	

Users Mode Set	User Mode	<b>Standard Mode</b> Basic Mode Extended Mode User Mode A User Mode B User Mode C		User's mode to change channel numbers
	Edit User Mode A	Max Channel = XXX Control = XXX :		Preset User modes A
	Edit User Mode B	Max Channel = XXX Control = XXX :		Preset User modes B
	Edit User Mode C	Max Channel = XXX Control = XXX :		Preset User modes C
Edit Program	Select Programs	Auto Pro Part 1 = Program 1 ~ 10 <b>Program 1</b> Auto Pro Part 2 = Program 1 ~ 10 <b>Program 1</b> Auto Pro Part 3 = Program 1 ~ 10 <b>Program 1</b>		Select programs to be run
	Edit Program	Program 1 : Program 10	Program Test Step 01=SCxxx : Step 64=SCxxx	Testing program Program in loop Save and exit
	Edit Scenes	Edit Scene 001 ~ Edit Scene 250	Control,Pan,..... --Fade Time-- --Scene Time-- Input By Out	Save and automatically return manual scenes edit
	Rec. Controller	Up/Dn      Le/Ri XXX    —>    XXX Start sc      End sc		Automat. scenes rec
Language Set	English/ <b>Chinese</b>		Choose English or Chinese	

Default settings shaded

## 8.1 FUNCTION

### 8.1.1 Set DMX Address

With this function, you can adjust the desired DMX-address via the Control Board.

1. Access the main menu.
2. Tap the <Up/Down>button until " Set DMX Address" is displayed.
3. Press ENTER, the display will show " Set DMX Address" .
4. Tap the <Up/Down>button, the display will show "A001~AXXX"
5. Press ENTER to confirm or press <MODE/ESC> to return to the main menu.

### 8.1.2 DMX Value

With this function you can display the DMX 512 value of each channel. The display automatically shows the channel with a value changing.

1. Access the main menu.
2. Tap the <Up/Down>button until " DMX Value" is displayed.
3. Press ENTER, the display will show " DMX Value" .
4. Tap the <Up/Down>button, choose each channel.
5. Press ENTER to confirm or press <MODE/ESC> to return to the main menu.

### 8.1.3 Slave Mode

With this function, you can define the device as slave.

1. Access the main menu.
2. Tap the <Up/Down>button until " Slave Mode" is displayed.
3. Press ENTER, the display will show " Slave Mode" .
4. Tap the <Up/Down>button, the display will show "Slave1", "Slave2", "Slave3".
5. Press ENTER to confirm or press <MODE/ESC> to return to the main menu.

### 8.1.4 Auto Program

With this function, you can run the internal program. You can select the desired program under "Select program". You can set the number of steps under "Edit program". You can edit the individual scenes under "Edit scenes". With this function, you can run the individual scenes either automatically, i.e. with the adjusted Step-Time.

1. Access the main menu.
2. Tap the <Up/Down>button until " Auto Program" is displayed.
3. Press ENTER, the display will show " Auto Program" .
4. Tap the <Up/Down>button, the display will show "Master1", " Alone".
5. Press ENTER to confirm or press <MODE/ESC> to return to the main menu.

### 8.1.5 Sound Control

With this function, you can run the internal program sound-controlled.

1. Access the main menu.
2. Tap the <Up/Down>button until " Sound Control" is displayed.
3. Press <ENTER>, the display will show " Sound Control" .
4. Tap the <Up/Down>button, the display will show "Master", " Alone".
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

## 8.2 Information

### 8.2.1 Time information

#### Current Time

With this function, you can display the temporary running time of the device from the last power on. The display shows "XXXX", "XXXX" stands for the number of hours. The counter is resetted after turning the device off.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Information" is displayed. Press ENTER, the display will show " Information" . Tap the <Up/Down>button until the display will show " Time Information" . Press ENTER, the display will show " Time Information" .
2. Press <Up/Down>, the display will show " Current Time" .
3. Press <ENTER>, the display will show " Current Time" .
4. The display will show " XXXX" (Hours) ;
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

#### Total Run Time

With this function, you can display the running time of the device. The display shows “XXXX”, “XXXX” stands for the number of hours.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until “ Information” is displayed. Press ENTER, the display will show “ Information” . Tap the <Up/Down>button until the display will show “ Time Information” . Press ENTER, the display will show “ Time Information” .
2. Press <Up/Down>, the display will show “ Total run Time” .
3. Press< ENTER>, the display will show “ Total run Time” .
4. The display will show “ XXXX” (Hours) ;
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Last Run Time**

With this function, you can display last the running time of the lamp. The display shows “XXXX”, “XXXX” stands for the number of hours

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until “ Information” is displayed. Press ENTER, the display will show “ Information” . Tap the <Up/Down>button until the display will show “ Time Information” . Press ENTER, the display will show “ Time Information” .
2. Press <Up/Down>, the display will show “ Last Run Time” .
3. Press< ENTER>, the display will show “ Last Run Time” .
4. The display will show “ XXXX” (Hours) ;
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Lamp Hours**

With this function, you can display the running time of the lamp. The display shows “XXXX”, “XXXX” stands for the number of hours.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until “ Information” is displayed. Press ENTER, the display will show “ Information” . Tap the <Up/Down>button until the display will show “ Time Info. Press ENTER, the display will show “ Time Information” .
2. Press <Up/Down>, the display will show “ Lamp Hours” .
3. Press< ENTER>, the display will show “ Lamp Hours” .
4. The display will show “ XXXX” (Hours) ;
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Last Run Password**

With this function, you can display the timer password. The time password is 038.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until “ Information” is displayed. Press ENTER, the display will show “ Information” . Tap the <Up/Down>button until the display will show “ Time Information” . Press ENTER, the display will show “ Time Information” .
2. Press <Up/Down>, the display will show “ Last Run Password” .
3. Press< ENTER>, the display will show “ Last Run Password” , the time password is 038.
4. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Clean Last Run**

With this function, you can clear last run time of the fixture. The display shows “ON” or

“OFF”, Press “Enter” to confirm.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until “ Information” is displayed. Press ENTER, the display will show “ Information” . Tap the <Up/Down>button until the display will show “ Time Information” . Press ENTER, the display will show “ Time Information” .
2. Press <Up/Down>, the display will show “ Clean Last Run” .
3. At “ Timer Password” menu input a correct password, press< ENTER>, the display will show “ Clean Last Run” ,
4. The display will show “ OFF” or “ ON” .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **LampTime Password**

With this function, you can display the timer password. The time password is 038.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until “ Information” is displayed. Press ENTER, the display will show “ Information” . Tap the <Up/Down>button until the display will show “ Time Information” . Press ENTER, the display will show “ Time Information” .
2. Press <Up/Down>, the display will show “ Lamp Time Password” .
3. Press< ENTER>, the display will show “ Lamp Time Password” , the time password is 038.
4. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Clean Lamp Time**

With this function you can clear the running time of the lamp. Please clear the lamp time every time you replace the lamp.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until “ Information” is displayed. Press ENTER, the display will show “ Information” . Tap the <Up/Down>button until the display will show “ Time Information” . Press ENTER, the display will show “ Time Information” .
2. Press <Up/Down>, the display will show “ Clean Lamp Time” .
3. At “ Timer Password” menu input a correct password, press< ENTER>, the display will show “ Clean Lamp Time” ,
4. The display will show “ OFF” or “ ON” .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

## **8.2.2 Temperature Info**

### **Head Temperature**

With this function you can display the temperature on the display board of the base (near CMY-filter) in Celsius.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until “ Information” is displayed. Press ENTER, the display will show “ Information” . Tap the <Up/Down>button until “ Temperature Info” is displayed. Press ENTER, the display will show “ Temperature Info” .
2. Press <Up/Down>, the display will show “ Head Temperature” .
3. Press< ENTER>, the display will show “ Head Temperature” .
4. The display show “XXX ° C/ ° F”.
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### 8.2.3 Fan Info

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Information" is displayed. Press ENTER, the display will show " Information" .
2. Press <Up/Down>, the display will show " Fan Info" .
3. Press< ENTER>, the display will show " Fan Info" .
4. The display will show " 1U\_FAN1:....." .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### 8.2.4 Encode Info

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Information" is displayed. Press ENTER, the display will show " Information" .
2. Press <Up/Down>, the display will show " Encode Info" .
3. Press< ENTER>, the display will show " Encode Info" .
4. The display will show " PAN ENCODE:" or" TILT ENCODE:" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### 8.2.5 Ethernet IP

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Information" is displayed. Press ENTER, the display will show " Information" .
2. Press <Up/Down>, the display will show " Ethernet IP" .
3. Press< ENTER>, the display will show " Ethernet IP" .
4. The display will show " Ethernet IP" or" XXX. XXX. XXX. XXX" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### 8.2.6 Software version

With this function, you can display the software version of the device.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Information" is displayed. Press ENTER, the display will show " Information" .
2. Press <Up/Down>, the display will show " Software version" .
3. Press< ENTER>, the display will show " Software version" .
4. The display show "Ver x.x.....".
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### 8.2.7 Error Info

With this function, you can display the software version of the device.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Information" is displayed. Press ENTER, the display will show " Information" .
2. Press <Up/Down>, the display will show " Error Info" .
3. Press< ENTER>, the display will show " Error Info" .
4. The display show " Error Record 1" frist channel, Press <Up/Down> the display will show " Error Record 2" ..... " Error Record10" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

## 8.3 LAMP CONTROL

When the real temperature around the lamp is higher than the preset value, the lamp will be shut down in 5 minutes automatically.

- When the LCD display shows "Off", it means the lamp must be turned on again manually;

- When the LCD display shows “Hot”, it means the actual temperature around the lamp is still higher than the preset value, so even the lamp can not be striked even the menu Lamp is turned to ON, as the lamp switch is compelled to turned off.
- When the temperature unit after the temperature value come to lowercase letter “c” or “f”, it means menu Lamp is turned to ON, but the lamp is not full dimming up.
- When the temperature unit after the temperature value come to capital letter “C” or “F”, it menu Lamp is turned to ON, and the lamp is full intensity.

### 8.3.1 Lamp on/off

With this function you can switch the lamp on or off via the Control Board.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until "Lamp Control" is displayed. Press ENTER, the display will show "Lamp Control". Tap the <Up/Down>button until the display will show "Lamp On or Off". Press ENTER, the display will show "Lamp On or Off".
2. Press <Up/Down>, the display will show "OFF" or "ON".
3. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

**Remark:** The menu Lamp On/Off is the software command only, the lamp can be striked successfully only when the menu Lamp is set to ON and the actual temperature is lower than the limited value.

### 8.3.2 Automatic on

With this function you can select if the lamp will be switched on when switching the power on.

Select “ON” by turning the encoder if you wish to enable this function or “OFF” if you don’t.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until "Lamp Control" is displayed. Press ENTER, the display will show "Lamp Control". Tap the <Up/Down>button until the display will show "Automatic On". Press ENTER, the display will show "Automatic On".
2. Press <Up/Down>, the display will show "OFF" or "ON".
3. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### 8.3.3 Lamp on via external controller

With this function you can select if you can switch the lamp on via an external controller (DMX-channel of internal programs, value 64-79). Select “ON” by turning the encoder if you wish to enable this function or “OFF” if you don’t.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until "Lamp Control" is displayed. Press ENTER, the display will show "Lamp Control". Tap the <Up/Down>button until the display will show "Lamp On Via DMX". Press ENTER, the display will show "Lamp On Via DMX".
2. Press <Up/Down>, the display will show "OFF" or "ON".
3. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### 8.3.4 Lamp off via external controller

With this function you can select if you can switch the lamp off via an external controller (DMX-channel of internal programs, value 224-239). Select “ON” by turning the encoder if you wish to enable this function or “OFF” if you don’t.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until "Lamp Control" is displayed. Press ENTER, the display will show "Lamp Control". Tap the

<Up/Down>button until the display will show " Lamp Off Via DMX" . Press ENTER, the display will show " Lamp Off Via DMX" .

2. Press <Up/Down>, the display will show " OFF" or " ON" .
3. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **8.3.5 Max on at temp.**

With this function you can set the inside temperature from which the projector will restrike the lamp after automatic lamp shut off.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Lamp Control" is displayed. Press ENTER, the display will show " Lamp Control" . Tap the <Up/Down>button until the display will show " Max On at Temp" . Press ENTER, the display will show " Max On at Temp" .
2. Press <Up/Down>, the display will show " 45°C " , Temperature generally in 20~79 °C.
3. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **8.3.6 Lamp off temp.**

With this function you can set the inside temperature at which the projector will automatically switch the lamp off.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Lamp Control" is displayed. Press ENTER, the display will show " Lamp Control" . Tap the <Up/Down>button until the display will show " Lamp Off Temp" . Press ENTER, the display will show " Lamp Off Temp" .
2. Press <Up/Down>, the display will show " 130°C " , Temperature generally in 80~139 °C.
3. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

**When the temperature around the lamp is higher than the preset value continuously up to 5 minutes, the lamp will be shut off automatically.**

**If the lamp be shut off automatically due to over heat, it can not be striked again automatically, it must be turned on again by manually.**

## **8.4 PERSONALITY**

### **8.4.1 Status settings**

#### **Address via DMX**

With this function, you can adjust the desired DMX-address via an external controller.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" . Tap the <Up/Down>button until the display will show " Status setting" . Press ENTER, the display will show " Status setting" .
2. Press <Up/Down>, the display will show " Address via DMX" .
3. Press <ENTER>, the display will show " Address via DMX" .
4. The display show " ON" ,Press <Up/Down>, the display will show " OFF" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

#### **No DMX Status**

With this function, when the drive is not DMX signal, it runs automatism, close, hold and music, the default is hold.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" . Tap the <Up/Down>button until the display will show " Status setting" . Press ENTER, the display will show " Status setting" .
2. Press <Up/Down>, the display will show " No DMX Status" .
3. Press< ENTER>, the display will show " No DMX Status" .
4. The display show " Hold" ,Press <Up/Down>, the display will show "Close", "Auto", "Music".
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Pan Reverse**

With this function you can reverse the Pan-movement.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" . Tap the <Up/Down>button until the display will show " Status setting" . Press ENTER, the display will show " Status setting" .
2. Press <Up/Down>, the display will show "Pan Reverse".
3. Press< ENTER>, the display will show "Pan Reverse".
4. The display show " OFF" ,Press <Up/Down>, the display will show " ON" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Tilt Reverse**

With this function you can reverse the Tilt-movement.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" . Tap the <Up/Down>button until the display will show " Status setting" . Press ENTER, the display will show " Status setting" .
2. Press <Up/Down>, the display will show " Tilt Reverse" .
3. Press< ENTER>, the display will show " Tilt Reverse" .
4. The display show " OFF" ,Press <Up/Down>, the display will show " ON" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Pan Degree**

With this function, you can select pan degree for 630 or 540.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" . Tap the <Up/Down>button until the display will show " Status setting" . Press ENTER, the display will show " Status setting" .
2. Press <Up/Down>, the display will show " Pan Degree" .
3. Press< ENTER>, the display will show " Pan Degree" .
4. The display show " 540" ,Press <Up/Down>, the display will show " 630" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Feedback**

With this function, you can feedback switch of pan movement or tilt movement.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" . Tap the <Up/Down>button until the display will show " Status setting" . Press ENTER, the

- display will show " Status setting" .
2. Press <Up/Down>, the display will show " Feedback" .
  3. Press< ENTER>, the display will show " Feedback" .
  4. The display show " ON" ,Press <Up/Down>, the display will show " OFF" .
  5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Movement Speed**

With this function, you can select scan mode from 1 to 4.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" . Tap the <Up/Down>button until the display will show " Status setting" . Press ENTER, the display will show " Status setting" .
2. Press <Up/Down>, the display will show " Movement Speed" .
3. Press< ENTER>, the display will show " Movement Speed" .
4. The display show " Speed 1" ,Press <Up/Down>, the display will show "Speed 2", "Speed 3", "Speed 4".
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Hibernation —Standby mode**

The lamp and step motors will be power off if the fixture stay without DMX signal for 15 mins (Factory default).And the fixture will be reset before working once it receive DMX signal again.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" . Tap the <Up/Down>button until the display will show " Status setting" . Press ENTER, the display will show " Status setting" .
2. Press <Up/Down>, the display will show " Hibernation" .
3. Press< ENTER>, the display will show " Hibernation" .
4. The display show " 15M" ,Press <Up/Down>, the display will show " 01M", " 02M" .... " 99M" or" OFF" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

#### **8.4.2 Service setting**

**Password**—The Password for this function is "50".

**RDM PID**— With this function you can call up various submenus via RDM.

This device is RDM ready. RDM stands for "remote device management" and makes remote control of devices connected to the DMX-bus. ANSI E1.20-2006 by ESTA specifies the RDM standard as an extension of the DMX512 protocol.

Manual settings like adjusting the DMX starting address are no longer needed. This is especially useful when the device is installed in a remote area.

RDM ready and conventional DMX devices can be operated in one DMX line. The RDM protocol sends own packages in the DMX512 data feed and does not influence conventional devices.

If DMX splitters are used and RDM control is to be used, these splitters must support RDM.

### **Ethernet IP**

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" .
1. Press <Up/Down>, the display will show " Ethernet IP" .
2. Press< ENTER>, the display will show " Ethernet IP" .
3. The display show " XXX. XXX. XXX. XXX" .
4. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Ether Mask IP**

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" . Tap the <Up/Down>button until the display will show " Display Setting" . Press ENTER, the display will show " Display Setting" .
2. Press <Up/Down>, the display will show " Ether Mask IP" .
3. Press< ENTER>, the display will show " Ether Mask IP" .
4. The display show " XXX. XXX. XXX. XXX" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Clear Err. Info**

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" . Tap the <Up/Down>button until the display will show " Display Setting" . Press ENTER, the display will show " Display Setting" .
2. Press <Up/Down>, the display will show " Clear Err. Info" .
3. Press< ENTER>, the display will show " Clear Err. Info" .
4. The display show " OFF" or" ON" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **DFLT Pow. LampOn**

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" . Tap the <Up/Down>button until the display will show " Display Setting" . Press ENTER, the display will show " Display Setting" .
2. Press <Up/Down>, the display will show " DFLT Pow. LampOn" .
3. Press< ENTER>, the display will show " DFLT Pow. LampOn" .
4. The display show " ON" or" OFF" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

## **8.4.3 Display settings**

### **Shutoff time**

With this function you can shut off the color LCD display after 2 to 59 minutes. Turn the encoder in order to select the desired shut off time. The default is 5 minute.

### **Display Reverse**

With this function you can rotate the display by 180° .

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until

" Personality" is displayed. Press ENTER, the display will show " Personality" . Tap the <Up/Down>button until the display will show " Display Setting" . Press ENTER, the display will show " Display Setting" .

2. Press <Up/Down>, the display will show " Display Reverse" .
3. Press< ENTER>, the display will show " Display Reverse" .
4. The display show " Auto" ,Press <Up/Down>, the display will show " ON" " OFF" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **Key Lock**

With this function you can activate the automatic keylock status. If this function is activated, the keys will be locked automatically after exiting the edit mode for 15 seconds. keeping press the<MODE/ESC> key for 3seconds if you do not need this function.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" . Tap the <Up/Down>button until the display will show " Display Setting" . Press ENTER, the display will show " Display Setting" .
2. Press <Up/Down>, the display will show " Key Lock" .
3. Press< ENTER>, the display will show " Key Lock" .
4. The display show " OFF" ,Press <Up/Down>, the display will show " ON" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **8.4.4 Temperature C/F**

With this function, Display the temperature for Celsius or Fahrenheit.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" .
2. Press <Up/Down>, the display will show " Temperature C/F" .
3. Press< ENTER>, the display will show " Temperature C/F" .
4. The display show " Celsius" ,Press <Up/Down>, the display will show "Fahrenheit".
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **8.4.5 Initial Status**

With this function, Display initial effect position.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" .
2. Press <Up/Down>, the display will show " Initial status" .
3. Press< ENTER>, the display will show " Initial status" .
4. The display show " XXX" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### **8.4.6 Select Signal**

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" .
2. Press <Up/Down>, the display will show " Select Signal" .
3. Press< ENTER>, the display will show " Select Signal" .
4. The display show " DMX Only" , Press <Up/Down>, the display will show "DMX Only", "Art-Net On IP2", "Art-Net On IP10",
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

#### 8.4.7 Set Universe

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" .
2. Press <Up/Down>, the display will show " Set Universe" .
3. Press< ENTER>, the display will show " Set Universe" .
4. The display show " 000~255" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

#### 8.4.8 Reset Default

With this function, you can select restore factory set for ON or OFF, the default is OFF.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Personality" is displayed. Press ENTER, the display will show " Personality" .
2. Press <Up/Down>, the display will show " Reset Default" .
3. Press< ENTER>, the display will show " Reset Default" .
4. The display show " OFF" ,Press <Up/Down>, the display will show "ON".
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

#### 8.5 Reset-function

With this function you can reset the device via the Control Board. You can select the different reset functions by turning the encoder.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Reset-functions" is displayed. Press ENTER, the display will show " Reset-functions" .
2. The display show " Reset All" , Press <Up/Down>, the display will show " Reset Pan/Tilt", " Reset Colors", "Reset Gobos", "Reset Shutter", " Reset Other" .
3. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

#### 8.6 Effect Adjust

##### 8.6.1 Test channel

With this function you can test each channel on its (correct) function.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Effect Adjust" is displayed. Press ENTER, the display will show " Effect Adjust" .
2. Press <Up/Down>, the display will show " Test Channel" .
3. Press< ENTER>, the display will show " Test Channel" .
4. The display show " Pan Moving" frist channel, Press <Up/Down>, can choose other channel.
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

##### 8.6.2 Manual control

With this function, you can adjust the lamp more easily. All effects will be canceled, the shutter opens and the dimmer intensity will be set to 100 %. With the individual functions, you can focus the light on a flat surface (wall) and erform the fine lamp adjustment.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Effect Adjust" is displayed. Press ENTER, the display will show " Effect Adjust" .
2. Press <Up/Down>, the display will show " Manual control" .
3. Press< ENTER>, the display will show " Manual control" .
4. The display show " PAN=XXX" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### 8.6.3 Calibration

With this function, you can calibrate and adjust the effect wheels to their correct positions. The password of calibrate values is 050.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Effect Adjust" is displayed. Press ENTER, the display will show " Effect Adjust" .
2. Press <Up/Down>, the display will show " Calibration" .
3. Press< ENTER>, the display will show " Calibration" .
4. The display show " Password=XXXX" .
5. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### 8.7 Users mode set

In this menu, user can select different channels list by different sequence:

For example, after the user enter this manual, if select Auto Program = CH 22, means in this User's mode, the "Dimmer" is in Channel 16.

#### 8.7.1 User mode

With this function, you can create user defined channel orders.

#### 8.7.2 Edit User mode

With this function, you can adjust the rest user defined channel order.

1. Tap <MODE/ESC>button, access the main menu, Tap the <Up/Down>button until " Users mode set" is displayed. Press ENTER, the display will show " Edit User Moed" .
2. The display show " User Mode" frist channel, Press <Up/Down> the display will show " Edit User Mode" .
3. Press <ENTER> to confirm or press <MODE/ESC> to return to the main menu.

### 8.8 Edit program

#### 8.8.1 Select program

With this function, you can select the program for the Program Run.

#### 8.8.2 Edit program

With this function, you can edit the internal programs.

#### 8.8.3 Edit scenes

With this function, you can edit the scenes of the internal programs.

#### 8.8.4 Rec. Controller

The moving head features an integrated DMX-recorder by which you can transmit the programmed scenes from your DMX-controller to the moving head. Adjust the desired scene numbers via the encoder (from – to). When you call up the scenes at your controller, they will automatically be transmitted to the moving head.

#### Excursion:

A Master unit can send up to 3 different data groups to the Slave units, i.e. a Master unit can start 3 different Slave units, which run 3 different programs. The Master unit sends the 3 program parts in a continuous loop.



The Slave unit receives data from the Master unit according to the group which the Slave unit

was assigned to. If e.g. a Slave unit is set to “Slave 1” in the menu “Set to Slave”, the Master unit sends “Auto Program Part 1” to the Slave unit. If set to “Slave 2”, the Slave unit receives “Auto Program Part 2”.

To start a Auto Program please proceed as follows:

### **1. Slave-Setting**

- Select “Function Mode” by turning the encoder.
- Press the Enter button to confirm.
- Select “Set to slave” by turning the encoder.
- Press the Enter button to confirm.
- Turn the encoder to select “Slave 1”, “Slave 2” or “Slave 3”.
- Press the Enter button to confirm.
- Press the MODE/ESC button in order to return to the main menu.

### **2. Automatic Program Run**

- Select “Function Mode” by turning the encoder.
- Press the Enter button to confirm.
- Select “Auto Program” by turning the encoder.
- Press the Enter button to confirm.
- Turn the encoder to select “Master” or “Alone”. The selection "Alone" means Stand Alone-mode and "Master" that the device is defined as master.
- Press the Enter button to confirm.
- Press the MODE/ESC button in order to return to the main menu.

### **3. Program selection for Auto Pro Part**

- Select “Edit program” by turning the encoder.
- Press the Enter button to confirm.
- Select “Select programs” by turning the encoder.
- Press the Enter button to confirm.
- Turn the encoder to select “Auto Pro Part 1”, “Auto Pro Part 2” or “Auto Pro Part 3”, and thus select which Slave program is to be sent. Selection “Part 1” means, that the Slave unit runs the same program as the master units.
- Press the Enter button to confirm.
- Press the MODE/ESC button in order to return to the main menu.

### **4. Program selection for Edit Program**

- Select “Edit program” by turning the encoder.
- Press the Enter button to confirm.
- Select “Edit program” by turning the encoder.
- Press the Enter button to confirm.
- Turn the encoder to select the desired program. With this function you can edit specific scenes into a specific program.
- Press the Enter button to confirm.
- Press the MODE/ESC button in order to return to the main menu.

### **5. Automatic Scene Recording**

- Select “Edit program” by turning the encoder.
- Press the Enter button to confirm.
- Select “Edit scenes” by turning the encoder.
- Turn the encoder to select the desired scene numbers. You can program a maximum number of 250
- Press the Enter button to confirm.

- Press the MODE/ESC button in order to return to the main menu.

Example:

Program 2 includes scenes: 10, 11, 12, 13

Program 4 includes scenes: 8, 9, 10

Program 6 includes scenes: 12, 13, 14, 15


Auto Pro Part 1 is Program 2;

Auto Pro Part 2 is Program 3;


Auto Pro Part 3 is Program 6

The 3 Slave groups run the Auto Program in certain time segments, as shown in the following picture:


Part 1:

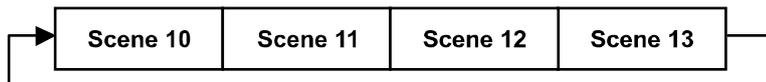

Part 2:

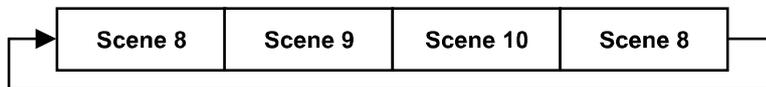

Part 3:

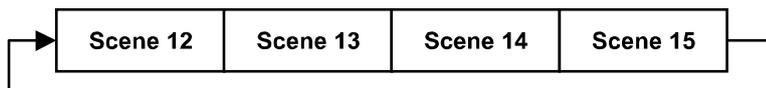

## 9. INSTRUCTIONS ON USE

DMX channel's functions and their values (26DMX channels):				
Mode/Channel			Value	
St	Ba	Ex		
1	1	1	<b><u>PAN Movement 8bit :</u></b>	
			0-255	Pan Movement By 630/540
2		2	<b><u>Pan Fine 16bit</u></b>	
			0-255	Fine control of Pan movement
3	2	3	<b><u>TILT Movement 8bit :</u></b>	
			0-255	Tilt Movement By 250
4		4	<b><u>Tilt Fine 16bit</u></b>	
			0-255	Fine control of Tilt movement
5	3	5	<b><u>Speed Pan/Tilt movement:</u></b>	
			0-225	max to min speed
			226-235	blackout by movement
			236-245	blackout by all wheel changing
			246-255	no function
6	4	6	<b><u>Shutter, strobe:</u></b>	

			0-31	Shutter closed
			32-63	No function (shutter open)
			64-95	Strobe effect slow to fast
			96-127	No function (shutter open)
			128-159	Pulse-effect in sequences
			160-191	No function (shutter open)
			192-223	Random strobe effect slow to fast
			224-255	No function (shutter open)
7	5	7		<b><u>Dimmer intensity:</u></b>
			0-255	Intensity 0 to 100%
		8		<b><u>Fine Dimmer intensity:</u></b>
			0-255	Dimmer intensity fine
8	6	9		<b><u>Zoom :</u></b>
			0-255	Zoom adjustment from small to big
		10		<b><u>Zoom Fine:</u></b>
			0-255	Zoom adjustment Fine
9	7	11		<b><u>Focus :</u></b>
			0-255	Continuous adjustment from near to far
		12		<b><u>Focus/Auto Focus Fine:</u></b>
			0-255	Continuous adjustment Fine
10	8	13		<b><u>Auto Focus:</u></b>
			0-50	Auto Focus Off
			51-127	7.5m(spot mode)
			128-191	15m
			192-255	20m
11	9	14	0-255	<b><u>AutoFocus Adjustment:</u></b>
				Continuous adjustment
12	10	15		<b><u>Color Wheel :</u></b>
			0-10	Open / white
			11-19	Red
			20-28	Blue
			29-37	Green
			38-46	Magenta
			47-55	Yellow
			56-64	Cyan
			65-73	Pink
			74-82	Orange
			83-91	Aqua
			92-100	Purple
			101-109	CTO
			110-118	CTB
			119-127	UV
			128-189	Clock-wise scroll from fast to slow

			190-193	No rotation
			194-255	Counter clock-wise scroll from slow to fast
		16		<b><u>Color Wheel Fine :</u></b>
			0-255	Color Wheel colour change to any position Fine
				<b><u>Rotating gobos, cont. rotation :</u></b>
			0-11	Beam open
			12-21	SPOT open
			22-31	Rot. gobo 1
			32-41	Rot. gobo 2
			42-51	Rot. gobo 3
			52-61	Rot. gobo 4
			62-71	Rot. gobo 5
			72-81	Rot. gobo 6
			82-91	Rot. gobo 7
			92-101	Rot. gobo 8
			102-112	Rot. gobo 1 shake
			113-123	Rot. gobo 2 shake
			124-134	Rot. gobo 3 shake
			135-145	Rot. gobo 4 shake
			146-156	Rot. gobo 5 shake
			157-167	Rot. gobo 6 shake
			168-178	Rot. gobo 7 shake
			179-189	Rot. gobo 8 shake
			190-223	Gobo wheel rotation forwards from fast to slow
			224-255	Gobo wheel rotation f backwards from slow to fast
				<b><u>Rotating gobo index, rotating gobo rotation :</u></b>
			0-127	Gobo indexing
			128-189	Forwards gobo rotation from fast to slow
			190-193	No rotation
			194-255	Backwards gobo rotation from slow to fast
		19		<b><u>Rotating gobo indexing Fine</u></b>
			0-255	Fine indexing
				<b><u>Fixed Gobos :</u></b>
			0-21	Open/hole
			22-28	Gobo 1
			29-35	Gobo 2
			36-42	Gobo 3
			43-49	Gobo 4
			50-56	Gobo 5
			57-63	Gobo 6
			64-70	Gobo 7
			71-77	Gobo 8
			78-84	Gobo 9
13	11	17		
14	12	18		
15	13	20		

			85-91	Gobo 10
			92-98	Gobo 11
			99-105	Gobo 12
			106-112	Gobo 1 shake slow to fast
			113-119	Gobo 2 shake slow to fast
			120-126	Gobo 3 shake slow to fast
			127-133	Gobo 4 shake slow to fast
			134-140	Gobo 5 shake slow to fast
			141-147	Gobo 6 shake slow to fast
			148-154	Gobo 7 shake slow to fast
			155-161	Gobo 8 shake slow to fast
			162-168	Gobo 9 shake slow to fast
			169-175	Gobo 10 shake slow to fast
			176-182	Gobo 11 shake slow to fast
			183-189	Gobo 12 shake slow to fast
			190-221	Gobo wheel rotation forwards from fast to slow
			222-223	No rotation
			224-255	Gobo wheel rotation f backwards from slow to fast
		21		<b><u>Fixed gobo indexing Fine</u></b>
			0-255	Fixed gobo Fine indexing
16	14	22		<b><u>rotating prism/Line prism, Prism / Gobo macros:</u></b>
			0-31	Open position (hole)
			32-50	8 Prism
			51-69	line Prism
			70- 88	10Prism
			89-107	8 Prism+10 Prism
			108- 127	10 Prism+Line Prism
			128-135	Macro 1
			136-143	Macro 2
			144-151	Macro 3
			152-159	Macro 4
			160-167	Macro 5
			168-175	Macro 6
			176-183	Macro 7
			184-191	Macro 8
			192-199	Macro 9
			200-207	Macro 10
			208-215	Macro 11
			216-223	Macro 12
			224-231	Macro 13
			232-239	Macro 14

			240-247	Macro 15
			248-255	Macro 16
17	15	23		<b><u>rotating prism/Line prism:</u></b>
			0-127	Prism indexing
			128-189	Forwards prism rotation from fast to slow
			190-193	No rotation
			194-255	Backwards prism rotation from slow to fast
		24		<b><u>8 facet rotating prism/Line prism indexing Fine</u></b>
	0-255		Fine indexing	
18	16	25	—	<b><u>Frost:</u></b>
			0-127	Disable frost
			128-255	Enable frost
19	17	26		<b><u>Lamp on/off, reset, internal programs:</u></b>
			0-19	colour change normal
			20-39	colour change to any position
			40-59	Lamp on
			60-79	Lamp switch off
			80-84	All motor reset
			85-87	Scan motor reset
			88-90	Colors motor reset
			91-93	Gobo motor reset
			94-96	Shutter motor reset
			97-99	Other motor reset
			100-119	Internal program 1
			120-139	Internal program 2
			140-159	Internal program 3
			160-179	Internal program 4
			180-199	Internal program 5
200-219	Internal program 6			
220-239	Internal program 7			
		240-255	Sound Control	

## 10. ERROR MESSAGE

When you turn on the fixture, it will make a reset at first. The display may show “Err channel is XX” while there are problems with one or more channels. “XX” stands for channel 1, 2, 3, 4, 5, 6 who has the testing sensor for positioning. For example, when the display shows “Err channel is Color wheel”, it means there is some error in channel 12. If there are some errors on channel 1, channel 3, channel 12 at the same time, you may see the error message “Err channel is Pan movement”, “Err channel is Tilt movement”, “Err channel is Color wheel” flash repeated for 2 times, and then the fixture will generate a second reset. If the fixture remain error message after performing reset more than 2 times, only the channels which have errors can not work properly, others can work as usual. Please contact with dealer or manufacturer for service, self repair is not allowed.

PAN Er

(PAN-yoke movement error) This message will appear after the reset of the fixture if the yoke's magnetic-indexing circuit malfunction (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The PAN- movement is not located in the default position after the reset.

### **TILT Er**

(TILT-head movement error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The TILT- movement is not located in the default position after the reset.

### **Speed Pan/Tilt movement Er**

(Speed Pan/Tilt movement error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The TILT- movement is not located in the default position after the reset.

### **Strobe Er**

(Strobe error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The Gobo Wheel 1- movement is not located in the default position after the reset.

### **Dimmer Er**

(Dimmer error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The Gobo Rot.1- movement is not located in the default position after the reset.

### **Zoom Er**

(Zoom error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The Gobo wheel 2 - movement is not located in the default position after the reset.

### **Focus Er**

(Focus error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The Gobo wheel 2 - movement is not located in the default position after the reset.

### **AutoFocus Adjustment Er**

(AutoFocus Adjustment error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The Gobo wheel 2 - movement is not located in the default position after the reset.

### **Color Wheel Er**

(Color wheel error) This message will appear after the reset of the fixture if the magnetic-indexing circuit malfunction (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The color wheel is not located in the default position after the reset.

### **Rotating gobo Er**

(Rotating gobo error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The Gobo wheel 2 - movement is not located in the default position after the reset.

### **Rotating prism Er**

(Rotating prism error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The LightSource - movement is not located in the default position after the reset.

## 11. CLEANING AND MAINTENANCE

The following points have to be considered during the inspection:

- 1) All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- 2) There must not be any deformations on the housing, color lenses, fixations and installation spots (ceiling, suspension, trussing).
- 3) Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4) The electric power supply cables must not show any damage, material fatigue or sediments. Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.



### CAUTION!

Disconnect from mains before starting maintenance operation.

In order to make the lights in good condition and extend the life time, we suggest a regular cleaning to the lights.

- 1) Clean the inside and outside lens each week to avoid the weakness of the lights due to accumulation of dust.
- 2) Clean the fan each week.
- 3) To make sure the smooth gobo rotation, we suggest adding proper lube to the wheel each three month, avoiding the excessive lube splashes during the gobo rotating.
- 4) A detailed electric check by approved electrical engineer each three month, make sure that the circuit contacts are in good condition, prevent the poor contact of circuit from overheating.

We recommend a frequent cleaning of the device. Please use a moist, lint- free cloth. Never use alcohol or solvents.

There are no serviceable parts inside the device except for the lamp. Please refer to the instructions under “Installation instructions”.

Should you need any spare parts, please order genuine parts from your local dealer.

## 12. TECHNICAL SPECIFICATIONS

**Power supply:** AC 100-240V~, 50/60Hz

**Power consumption:** 450W

**Lamp:** MSD Platinum 14 R

**Packing dimensions:** 77.5X49.5X42.5 cm

**Net weight:** 24 KGS

**Gross weight:** 29 KGS

**Remark:** errors and omissions for every information given in this manual excepted. All information is subject to change without prior notice.



