

## **WIRELESS TRANSMITTER WR-512**



## **Product parameters**

Wireless transmitter: just connect to the signal outlet of any DMX-512 controller, no need to connect any signal cable between the controller and the lighting equipment, the DMX-512 control system will be built between the controller and the controlled lightings. Each transmitter can control up to 512 receivers which can have up to 512 channels.

## Colours/ Gobos

,



:

Errors and omissions are possible. All specifications are subject for change without prior notice.